 


Part No.	① Female Inverted Flare	② Female Inverted Flare
302-02-02	1/8	1/8
302-03-03	3/16	3/16
302-04-04	1/4	1/4
302-05-05	5/16	5/16
302-06-06	3/8	3/8
302-08-08	1/2	1/2

302

Inverted Flare Union




Reference
Parker 42 IFHD
Weatherhead 302

Part No.	① Female Inverted Flare	② Male Pipe
352-03-02	3/16	1/8
352-04-02	1/4	1/8
352-05-02	5/16	1/8
352-05-04	5/16	1/4
352-06-02	3/8	1/8
352-06-04	3/8	1/4
352-08-06	1/2	3/8
352-10-08	5/8	1/2

352

Male Elbow

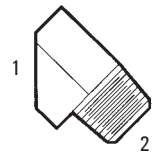


Reference
Parker 259 IFHD
Weatherhead 352

Part No.	① Female Inverted Flare	② Male Pipe
402-02-02	1/8	1/8
402-03-02	3/16	1/8
402-04-02	1/4	1/8
402-04-04	1/4	1/4
402-05-02	5/16	1/8
402-05-04	5/16	1/4
402-06-02	3/8	1/8
402-06-04	3/8	1/4
402-06-06	3/8	3/8
402-07-04	7/16	1/4
402-08-04	1/2	1/4
402-08-06	1/2	3/8
402-08-08	1/2	1/2
402-10-06	5/8	3/8
402-10-08	5/8	1/2
402-14-12	7/8	3/4

402

Male Elbow

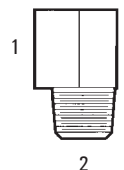

Reference
Parker 249 IFHD
Weatherhead 402

Inverted
Flare